


OPERATION



- To prevent injury, be sure the power cord is not accessible to small children.
- Read manual carefully for proper use and optimal operation.

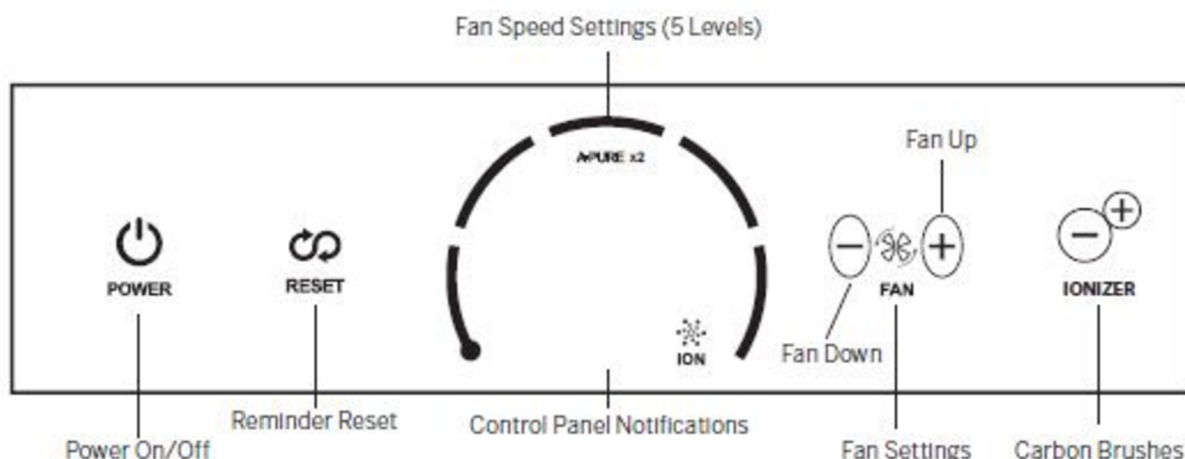

OPERATION

1. Take your Vollara® unit out of the shipping carton and remove all protective materials.
2. Place your unit in an appropriate location which could be four feet or higher from the ground. Never set it on the floor, and place in a location away from the HVAC return duct. The rear of the unit requires one inch or more of open area to allow unrestricted airflow.
3. Insert the Power Supply Plug into the power receptacle on the rear of the unit. Plug the appropriate cord into the Power Supply and into a working electrical outlet.
4. The Vollara Air & Surface Pro XL can be turned on or off, and adjusted, using the control panel on the front of the unit.
5. Push the Power button once to turn the unit on.

NOTE: Once the unit is powered on, both the (2) ActivePure Cells and the carbon brushes (ionizer) are functioning and will be illuminated on the control panel.

6. Push the Fan + button four times to reach the highest fan speed (5th level) and highest level of performance.

NOTE: For best results, run your Vollara Air & Surface Pro XL 24 hours a day, 7 days a week, giving you the benefits of ActivePure day and night.

Control Panel Settings

POWER (STAND BY)
Turns the unit **ON** and **OFF**.

RESET (REMINDER RESET)
Clears the maintenance reminders after performing routine maintenance.

FAN (FAN SPEED SETTINGS)
5 levels of fan speed; press - to adjust the fan speed down and + to adjust the fan speed up.

IONIZER (CARBON BRUSHES)
Press to turn carbon brushes **ON** and **OFF**.

Control Panel Notifications

ION
Ion illuminates to indicate carbon brushes are operating.

A·PURE x2
A·PURE x2 illuminates to indicate the (2) ActivePure Cells are functioning normally.

For maintenance and cleaning instructions, refer to the owner's manual.